




2. Open the printer by moving printhead locking handle to the “Open Position”.




3. With one hand supporting the printhead, remove the printhead from the printhead-mounting bracket by unscrewing the retention screw in the top center of the mounting bracket.




4. Disconnect, in order, the printer data cable (wide) and power cable (narrow).

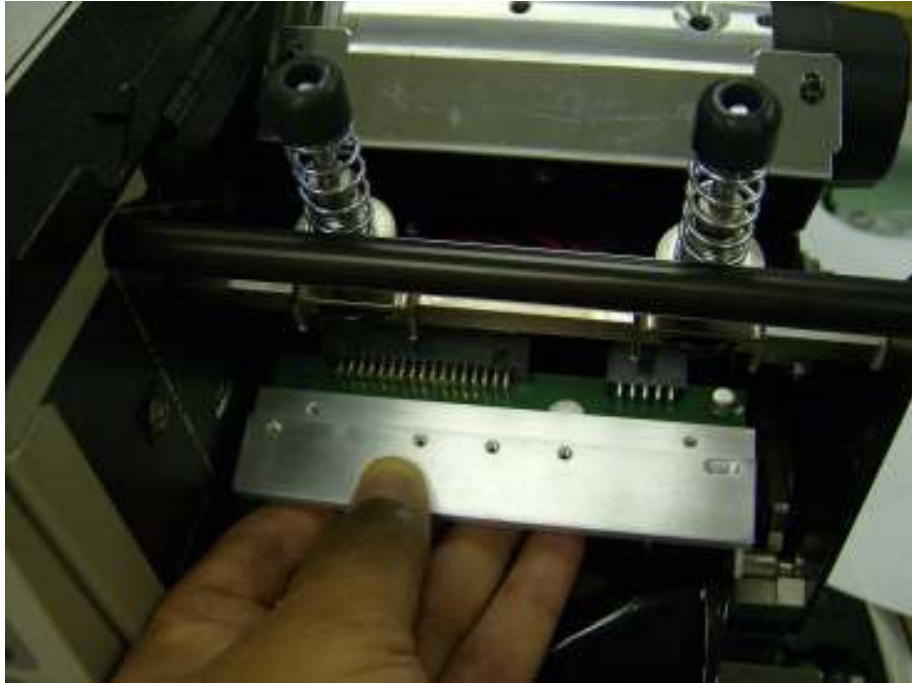


5. Connect the printer cables to the new Gulton printhead, first power and then data.

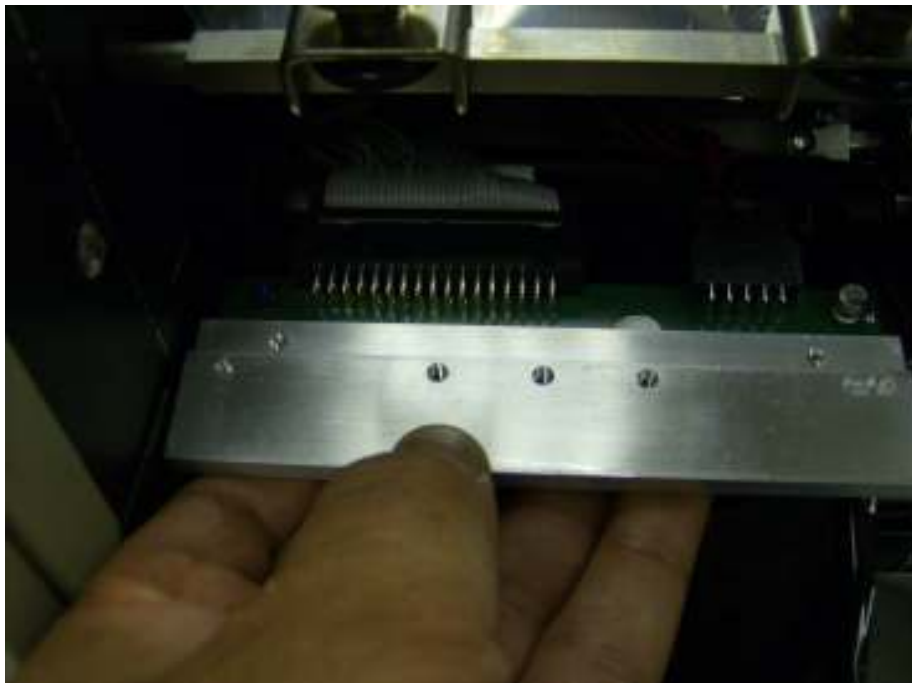

6. Attach the new Gulton printhead onto the printhead mounting bracket by aligning the mounting hole. First align the left side, then the right. Two audible “clicks” or “snaps” may be heard when the head is properly aligned, one per side.

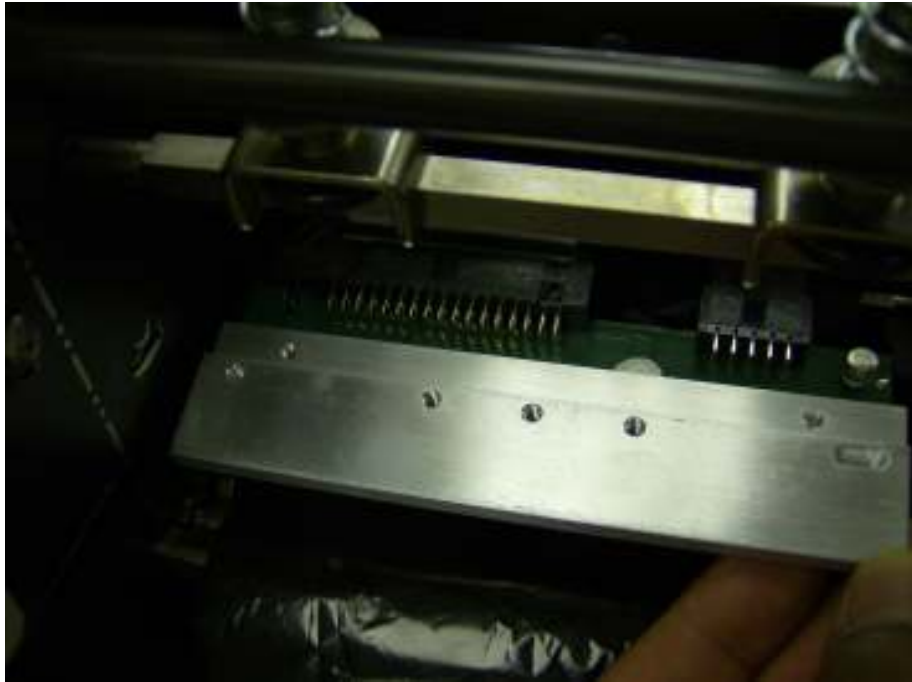

7. Tighten the retention screw in the top center of the printhead mounting bracket. This should be self centering.

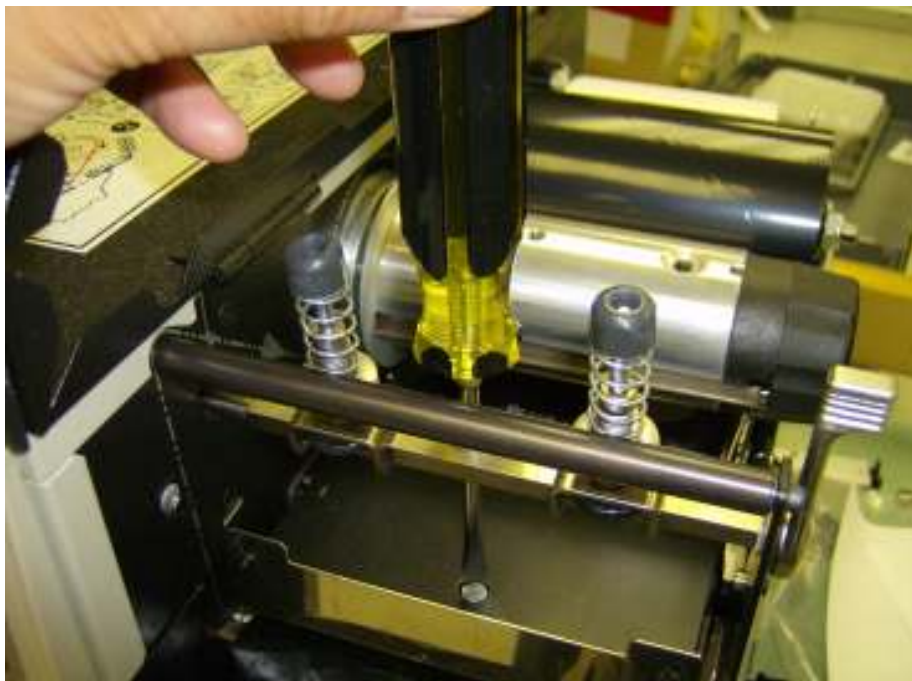

8. Align the printing stock and thermal transfer ribbon and close the printhead locking handle.



9. Align the spring loaded tension bar/bars as needed for optimal print quality.

