



## Print Head Installation Guide (BOCA™ Ghostwriter)

### **CAUTION:**

The printhead is sensitive to static electricity, which can damage the printhead or reduce its life. Ground yourself by touching some metal, such as printer's metal base, before touching the printhead. Clean the printhead to remove any salt or oil left from handling prior to operation.

- 1- Turn power switch off and disconnect the AC cord from the printer.
- 2- Remove the printer cover.
- 3- Unplug cable from printhead.
- 4- Lite up on the cam lock assembly located above the head-mounting block to remove pressure from the printhead.
- 5- Lite to on the printhead mounting block printhead.
- 6- Remove printhead from mounting block by removing two unmarked screws.
- 7- Place a new printhead on the mounting block.
- 8- Align the printhead to the mounting block with two mounting holes matching the two mounting hole on the mounting block.
- 9- Tighten the two flat-head screws.
- 10-Install the printhead mounting block/printhead head by step five.
- 11-Lock the mounting block/printhead by push from the cam lock assembly.
- 12-Plug cable to the printhead.
- 13-Connect the AC adapter and turn power switch on.

**NOTE:** Normally, mechanical adjustment is not necessary when replacing the printhead. Mounting screws on the mount assembly automatically locate the printhead. However, if the new print head performs poorly, some adjustment may be necessary.