



Print Head Installation Guide (SOBAR™ SPX-370)

CAUTION:

The printhead is sensitive to static electricity, which can damage the printhead or reduce its life. Ground yourself by touching some metal, such as printer's metal base, before touching the printhead. Clean the printhead to remove any salt or oil left from handling prior to operation.

- 1- Turn power switch off. Unplug the power cord.
- 2- Open the printer cover.
- 3- Lift the printhead lever counterclockwise to raise the printhead.
- 4- Remove the ribbon and the brackets from the printer.
- 5- Unplug the cable from the printhead.
- 6- Release the printhead mounting bracket/printhead from the spring –pressure assembly by unscrewing four screws.
- 7- Remove the printhead mounting bracket/printhead out of the printer.
- 8- Release the printhead from printhead mounting bracket by unscrewing three Philips bevel screws.
- 9- Place a new printhead on to the printhead mounting brackets.
- 10- Align the three-printhead mounting holes matching with three mounting holes on the printhead mounting brackets.
- 11- Attach the printhead mounting bracket/printhead to the spring-pressure assembly by tightening the four screws.
- 12- Plug the cable to the printhead.
- 13- Reload the ribbon and brackets.
- 14- Push the printhead lever clockwise until the printhead is locked.
- 15- Plug the power-cord, turn power on.

NOTE: Normally, mechanical adjustment is not necessary when replacing the printhead. Mounting screws on the mount assembly automatically locate the printhead. However, if the new print head performs poorly, some adjustment may be necessary.