



Print Head Installation Guide (Intermec™ 3600)

CAUTION:

The printhead is sensitive to static electricity, which can damage the printhead or reduce its life. Ground yourself by touching some metal, such as printer's metal base, before touching the printhead. Clean the printhead to remove any salt or oil left from handling prior to operation.

- 1- Turn power switch off, remove the power card.
- 2- Remove the media cover.
- 3- Rotate the printhead lift level clockwise until the printhead releases.
- 4- Remove the media and ribbon.
- 5- Unplug the printhead cable.
- 6- With one hand support the printhead. Loosen the printhead by unscrewing the two flat-head screws located on top of the mounting bracket.
- 7- Remove the printhead by sliding the printhead out from the right side of the mounting bracket.
- 8- Slide a new printhead into the printhead-mounting bracket.
- 9- Printhead will be aligned to the mounting bracket with slot and mounting hole on the printhead matching the two mounting pins on the mounting bracket.
- 10-Tighten the two flat-head screws.
- 11-Plug in the printhead cable.
- 12-Reinstall the media and ribbon.
- 13-Rotate the printhead level counterclockwise until the printhead locks.

NOTE: Normally, mechanical adjustment is not necessary when replacing the printhead. Mounting screws on the mount assembly automatically locate the printhead. However, if the new print head performs poorly, some adjustment may be necessary.