



Print Head Installation Guide (Unimark™ U400/DMX 400)

CAUTION:

The printhead is sensitive to static electricity, which can damage the printhead or reduce its life. Ground yourself by touching some metal, such as printer's metal base, before touching the printhead. Clean the printhead to remove any salt or oil left from handling prior to operation.

- 1- Turn power switch off, unplug power cord.
- 2- Open the printer right/top side door.
- 3- Press printhead latch release to unlock printhead.
- 4- Push printhead lever back to open.
- 5- Disconnect the cable from the printhead.
- 6- Locate the printhead mounting screw (slotted head screw) on the back of the printhead bracket assembly.
- 7- Unscrewing the printhead mounting screw releases the printhead.
- 8- Carefully attach a new printhead to the platen rollers by pushing two printhead side brackets into the shaft of platen roller. Make sure the printhead-mounting bracket in into the top shaft on the printhead mounting bracket assembly.
- 9- Firmly push printhead lever closed to printhead two springs aligned to the two stands on the printhead-mounting bracket.
- 10- Tighter the printhead mounting screw to secure the printhead .
- 11- Close the print right/top side door.
- 12- Plug power cord turn power switch on.

NOTE: Normally, mechanical adjustment is not necessary when replacing the printhead. Mounting screws on the mount assembly automatically locate the printhead. However, if the new print head performs poorly, some adjustment may be necessary.