



Print Head Installation Guide (IER/UBI™ 201 IIE)

CAUTION:

The printhead is sensitive to static electricity, which can damage the printhead or reduce its life. Ground yourself by touching some metal, such as printer's metal base, before touching the printhead. Clean the printhead to remove any salt or oil left from handling prior to operation.

- 1- Turn power switch off, unplug power cord.
- 2- Open the printer left side and topside doors.
- 3- Lift up the printhead lever to open the printhead.
- 4- Locate two printhead mounting screws on the printhead-mounting bracket.
- 5- Unscrew two screws to release the printhead.
- 6- Disconnect two cables from the printhead.
- 7- Connect two cables to a new printhead.
- 8- Carefully attach new printhead to printhead mounting bracket.
- 9- Align two printhead mounting holes to the two pins located on the printhead-mounting bracket.
- 10-Tighten two printhead mounting screws.
- 11-Turn printhead lever counter clockwise to lock the printhead.
- 12-Plug power-cord turn power switch on.

NOTE: Normally, mechanical adjustment is not necessary when replacing the printhead. Mounting screws on the mount assembly automatically locate the printhead. However, if the new print head performs poorly, some adjustment may be necessary.